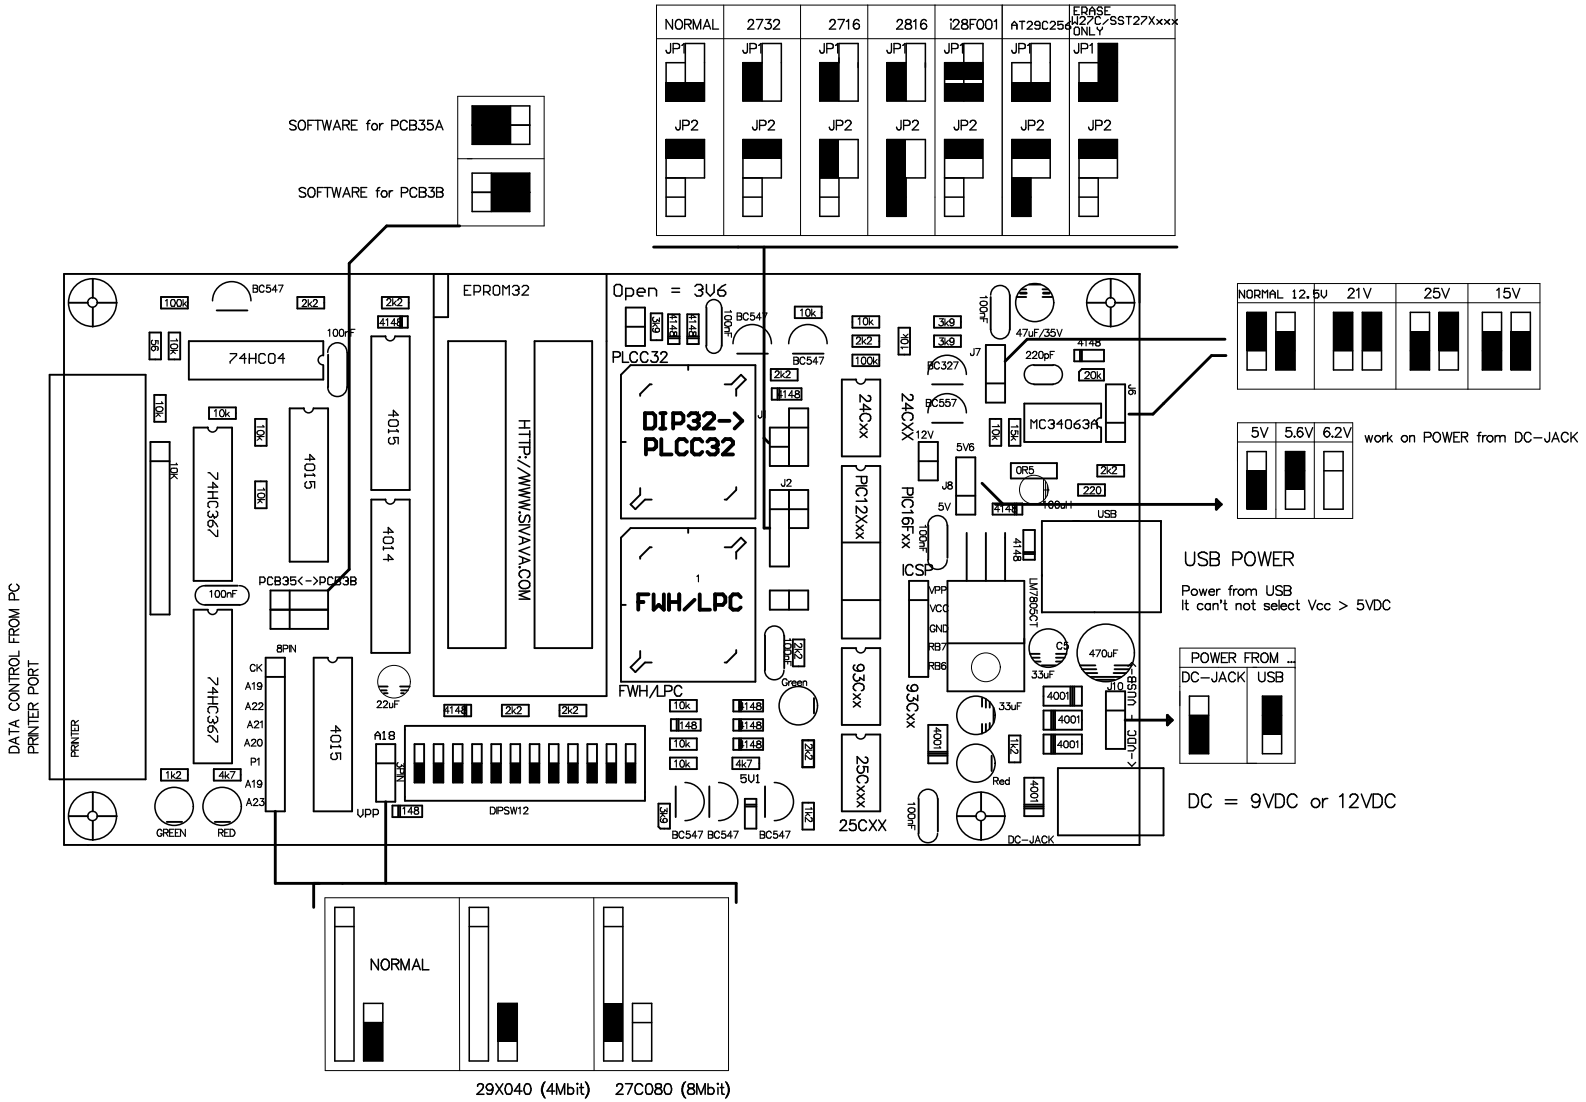
NORMAL
2732
2716
2816
i28F001
AT29C256
ERASE W27C/SST27Xxxx ONLY
JP1
JP2
SOFTWARE for PCB35A
SOFTWARE for PCB3B
EPROM32
HTTP://WWW.SIVAVA.COM
Open = 3V6
PLCC32
DIP32-> PLCC32
FWH/LPC
74HC04
74HC367
4015
4014
PCB35<->PCB3B
8PIN
DIPSW12
PRINTER
DATA CONTROL FROM PC
PRINTER PORT
GREEN
RED
24CXX
PIC12Xxx
PIC16Fxx
93Cxx
25CXX
ICSP
USB
DC-JACK
NORMAL 12.5V
21V
25V
15V
5V
5.6V
6.2V
work on POWER from DC-JACK
USB POWER
Power from USB
It can't not select Vcc > 5VDC
POWER FROM ...
DC-JACK
USB
DC = 9VDC or 12VDC
NORMAL
29X040 (4Mbit)
27C080 (8Mbit)