

AVR[®]
ATasicICE
Designer Guide

June 1998





AVR[®] ATasicICE Designer Guide

1.0 Introduction

The AVR ATasicICE (ASIC ICE) is a standardized development and test platform for users of AVR in ASICs. The solution provides a flexible way of real time emulation of the ASIC at hand. The ASIC ICE system is based on AVR Core version 2, which handles up to 128K bytes (64K x 16 bit) program memory and 64K bytes data memory.


The ASIC ICE package also includes the ATasicICE POD as a reference pod design.

This document describes how to interface the ATasicICE with custom pod designs. Two example designs based on the ATasicICE POD are also presented. For further information about the ASIC ICE Pod, see the document ICEPRO ASIC POD User's Guide. The ASIC ICE is used together with the AVR Studio[™] software.

1.1 Description of the ASIC ICE

ASIC ICE is based on the well proven AVR ICEPRO platform which is used for emulation of AVR standard parts. However, as each ASIC project has specific needs, a more flexible solution has been developed. The main difference between the standard Emulator and the ASIC ICE Emulator is that all the necessary buses as well as the interrupt system are reflected on the pod connector.

Figure 1-1. AVR ATasicICE, Block Diagram

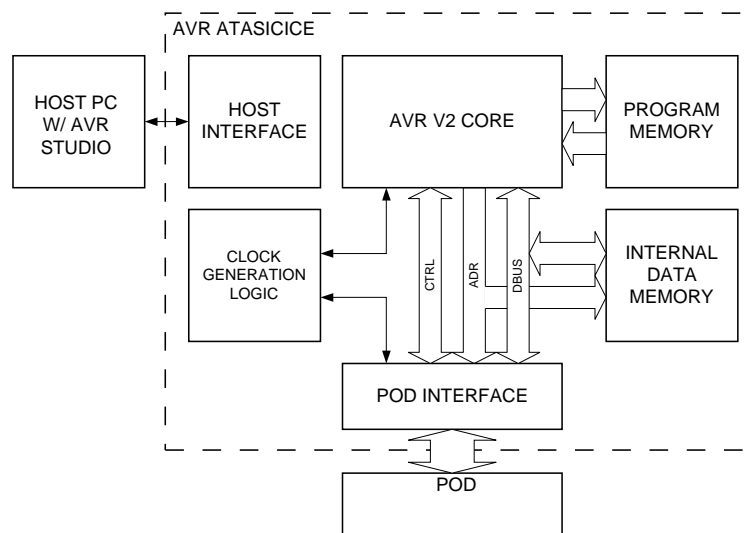

The AVR V2 Core is implemented in a high speed gate-array. Maximum operating frequency for the core is currently higher than possible for the rest of the emulator system. Timing issues are discussed in a separate section. The pod interface operates on **+5V only**. Both program memory and internal data memory are mapped into an overlay

memory. This makes it easy to download programs from the host. The clock generation logic is controlled by the emulator, but additional lines to and from the pod interface makes external control possible.

Note: Since the I/O is placed on an external pod, the timing will be different from the timing in a final ASIC. Additional delay should be calculated into the total signal delay. This delay includes the line delays.

1.2 Clock System

Using the AVR Studio™ software front end, the user can select between the on-board emulator clock, or an external clock source, e.g. the target system clock. EXTCLKEN indicates whether an external clock source is expected or not, and EXTCLKIN is the input pin for external clock source when selected.

Note: The pod should never try to drive EXTCLKIN if the EXTCLKEN is inactive.

The on-board clock module is functionally equivalent to the Verilog description:

```
assign clkalways = ck;
assign clkosc    = ck | ~clken;
assign ckcore    = stopcore | clkosc;
assign clkio     = clkrun ? stopio | clkosc: emiowr;
```

ck is the clock source (internal or external). *ckcore* is the clock source for the on-board AVR core (The details concerning emulator access to the core are not shown).

1.2.1 Clock Signals to the Pod

CLKALWAYS: This line always supply a clock, even if the Emulator is in stopped state.

CLKOSC: This line supplies a clock if the CLKEN signal from the pod is high.

CLKIO: This line supplies a clock if the CLKEN signal is high, STOPIO is low, and the emulator is running. When the emulator is stopped (CLKRUN is low), the emulator give a positive clock edge on CLKIO each time the user writes to an I/O location using the front-end software.

1.2.2 Control Signals from the Pod

CLKEN: Stops all clocks except the CLKALWAYS signal, and can be used to implement a power down mode where both the AVR core and the I/O is idle.

STOPCORE: Stops the clock signal to the AVR core.

STOPIO: Stops the clock signal CLKIO to the pod.

It should be noted that this emulator fully supports the sleep controller module used in the standard AVR microcontrollers using the signals stopcore, stopio and clken. The watch dog module found in the AVR microcontroller can be supported if run on the CLKALWAYS signal, or from an external oscillator.

1.2.3 Other Clock Signals

CLKRUN: This signal comes from the emulator and prevents the CLKIO and AVR core clock from running when the user stops the emulator. Note that the emulator generates a clock edge on clkio when writing to I/O locations. If I/O modules like timers are to be stopped when the emulator stops, the operation of this I/O module must be qualified by the CLKRUN signal.

1.2.4 Unsupported Clock Functions


In an ASIC, it is possible to gate or multiplex clocks within the chip and have an acceptable skew between the clocks. Using an FPGA, it is very difficult to control the timing, so it is strongly recommended that only the clock signals described above are used in an FPGA version of an ASIC.

1.2.5 Accessing Resources When the Emulator is Stopped When the Emulator is not in RUN mode, the pod will be accessed by the Emulator system for presentation in the front end software. All the different resources on the pod, and the external memory should be read and write (if the resource is writable in nature) accessible when the Emulator is not in RUN mode.

1.3 Reset Control Resetting the processor core can be done either by using the AVR Reset push button on the emulator chassis, or by using the reset button on the AVR Studio toolbar.

1.3.1 Reset Signals
 $\overline{\text{ARESET}}$ (O): Active low output from the ASIC ICE emulator. Signals a request for a core reset. Must be held active for at least 1 CPU clock.
 IRESET (I): ASIC ICE input that resets the core. Must be hold active for at least 5 CPU clocks.


Figure 1-2. Reset, Minimum Design

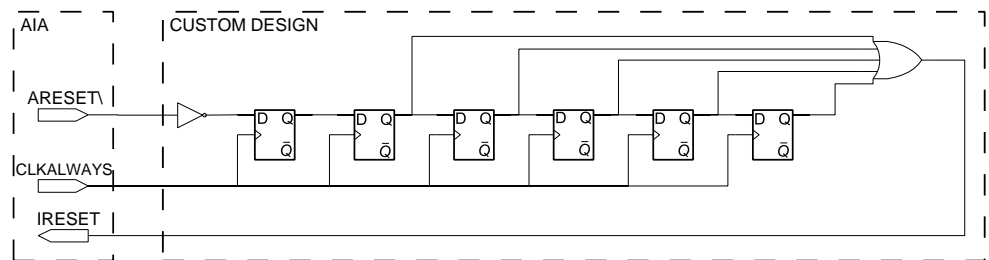

The pod design must include a reset control logic. A minimum reset control logic design is shown on Figure 1-2. This design ensures that the IRESET signal is at least 5 CPU clocks.

1.4 Interrupt System The ASIC ICE system supports up to 31 different interrupt sources. The pod needs to have an interrupt controller, and pass the encoded interrupt vector through the pod interface. The core acknowledges the acceptance of an interrupt back to the pod.

Figure 1-3. Interrupt Encoding System

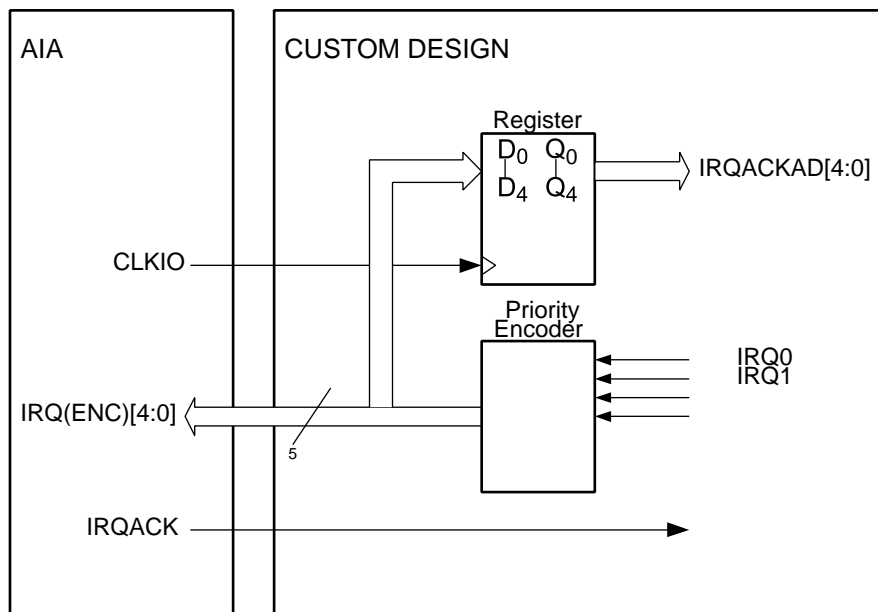

The AVR core uses a number of unencoded interrupt request input lines and responds to an interrupt request on these by using the IRQACK and the IRQACKAD lines. The

IRQACK indicates that the interrupt with highest priority is going to be handled by the core. The IRQACKAD lines reflects the interrupt vector address to the interrupt request that is going to be handled. To reduce the number of lines between the ASIC ICE emulator and the pod, some of the core logic has to be duplicated in the pod design. Figure 1-3 shows how to implement the interrupt encoding system in a custom design.

When the priority encoded IRQ signals are set to zero, no interrupt will occur. If the encoded IRQ[4:0] is nonzero, the value of IRQ[4:0] must be priority coded starting at 1 for highest priority and ending at 31 for lowest priority.

- | | | |
|--------------|--|---|
| 1.4.1 | Interrupt Signals | IRQ[4:0] (I): The lines encode the currently highest priority interrupt source from the I/O.
IRQACK (O): When the core accepts an interrupt and starts handling it, it gives an acknowledge signal on the IRQACK line. Based on this, the interrupt source can take the necessary actions (e.g. clear interrupt request flag). |
| 1.4.2 | Extended Interrupt Signals | GLOBINT (O): This line reflects the current value of the Global Interrupt flag in the Status Register.
IRQOK (O): Used during sleep to indicates to the sleep controller that an interrupt condition is established. |
| 1.4.3 | Custom Design Without Interrupt Support | If the interrupt system is not in use the pod must force all the interrupt request (IRQ4:0) lines to a low level. This will ensure that no unwanted interrupts will occur. |
-
- | | | |
|--------------|-----------------------|---|
| 1.5 | Memory System | This section describes how the different memories are handled in the ASIC ICE. |
| 1.5.1 | Program Memory | Version 2 of the AVR Core handles up to 128K bytes (64K x 16-bit) of program memory. This memory will always be handled inside the Emulator. There is no way of reading or modifying this memory through the pod interface. Furthermore, there is no way of executing code in an external program memory. Due to handling the program memory internally, the user will have access to an unlimited number of code break points. |
| 1.5.2 | Data Memory | The Data memory area of an AVR consists of up to four areas. At the lowest addresses, the Register file is mapped. Access to the registers will be handled internally in the core. Next is the I/O area. Every access to the I/O area is reflected on the interface by the use of the I/O read/write strobes (i.e. in the same way for load/store as for in/out.) except for the I/O locations listed in the table below. Following the I/O area, there is an optional on-chip data memory. If the ASIC has on board RAM, then this should be handled in the Emulator. Last, the ASIC may have an external memory interface. If the ASIC has an external memory, then this needs to be handled on the pod. The registers and the internal SRAM memory cannot be accessed from the pod.

The sizes of the register file and the I/O area are constant (32 registers, 64 I/O locations). The sizes of and the border between internal and external data memories can change and needs to be configured by the user to ensure that the correct read and write strobes are generated. |
| 1.5.3 | EEPROM Memory | If EEPROM memory is required in the ASIC, then this memory needs to be placed on the pod together with the EEPROM interface. The EEPROM is, in the AVR standard parts, accessed through I/O registers, and since the I/O registers are being handled in the pod, the pod needs to take full responsibility of the EEPROM memory. |

1.5.4 I/O Locations Handled in the Core

The following addresses in the I/O space will be handled directly in the core:

Name	I/O Address	Data address	Comment
SREG	0x3F	0x5F	Status Register
SPH	0x3E	0x5E	Stack Pointer High
SPL	0x3D	0x5D	Stack Pointer Low
RAMPZ	0x3B	0x5B	Only if Program Memory > 64K Byte

If the emulator is configured to use more than 64K bytes program memory, then the core will take control of I/O location 0x3B and use it for the ELPM instruction. Otherwise, this I/O location can be used freely on the pod. No I/O read strobe will be generated when the I/O locations handled by the core are read. The configuration is done from AVR Studio in the *emulator options* menu.

1.5.5 Memory Busses

ADR[15:0]: During RUN mode, ADR[15:0] are connected directly to the I/O and Memory address bus of the Core. When the Emulator is stopped, the same lines are used by the Emulator system to access resources on the pod and its surroundings.

DBUS[7:0]: During RUN mode, DBUS[7:0] are connected directly to the I/O and Memory data bus of the Core. When the Emulator is stopped, the same lines are used to extract information from the pod.

1.5.6 Memory Access Control Signals (From Emulator)

XRAMRE: XRAM Read Enable signal. During RUN mode, XRAMRE comes directly from the Core. It can be configured through the software front end what address the Core changes from accessing internal memory (on the Emulator) to accessing memory on the pod.

XRAMWE: XRAM Write Enable signal. During RUN mode, XRAMWE comes directly from the Core. It can be configured what address the Core changes from accessing internal memory (on the Emulator) to accessing memory on the pod.

IORE: IO Read Enable signal. During RUN mode, IORE comes directly from the Core.

IOWE: IO Write Enable signal. During RUN mode, IOWE comes directly from the Core.

1.5.7 Wait State Control Signals

MRAMACK: (Core output) Information supplied by the core to the pod to indicate that the core will attempt to access RAM in two consecutive cycles (call and return instructions). This means that the pod might need to insert extra wait-states.

CPUWAIT: (Core input) This line is used to wait the processor. It must be used during external memory accesses which cannot complete within the minimum time frame.

1.5.8 Data Bus Contention

The AVR core data bus has no tri-state control at the interface to the I/O.

In the emulator, there is a tri-state control in the pads from the gate-array holding the AVR core. The custom design should only drive this bus when either IORE or XRAMRE is active. In all other cases, the core is driving the data bus. If the internal data bus in the core has a valid signal, the value of this signal will be reflected at the data bus to the POD. If the internal data bus in the core is hi-Z, the emulator is still driving the data bus to the POD, but the value is indeterminate.

IMPORTANT!


- The emulator exaggerates the risk for bus contention in the ASIC, in the sense that the emulator AVR core drives the bus when the bus signal should not be trusted.
- If the ASIC/FPGA on the POD uses the data bus for other purposes than core access, the data bus must be isolated on the POD (or in the FPGA on the POD).
- If an ASIC uses the core data bus under other circumstances than core access, this function is still supported in the emulator.

- The internal registers inside the AVR core are: Stack Pointer High, Stack Pointer Low, Status Register and RAMPZ (if enabled). If the core reads these registers, the IORE signal at the POD remains low. This simplifies the design of the tri-state control in the POD FPGA. The IORE and XRAMRE signals can be used to qualify when the FPGA should drive the data bus, without having to check that the address really is contained within the FPGA.
- When the emulator is in stop mode, the emulator reads out data from the POD FPGA by using the IORE and IOWE strobe signals. No particular precautions needs to be taken in the FPGA in order to support this function as long as the IORE strobe controls the direction of the data bus from the POD.

1.6 Timing Issues

The ASIC ICE environment is different from a final ASIC. Use Figure 1-4 to calculate the extra delay caused by the ASIC ICE. The delay values are absolute worst case values (@70°C).

Figure 1-4. ASIC ICE, Timing Considerations

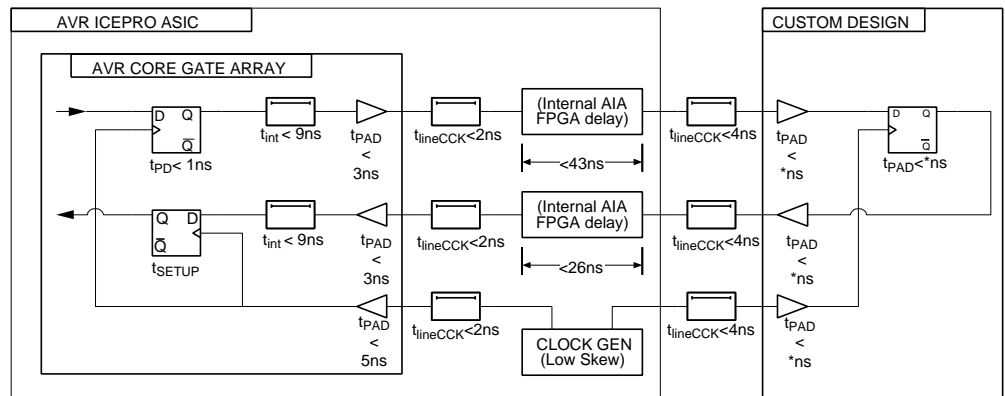

1.7 Sleep Control

SLEEPi: When the core performs a SLEEP instruction, this is reflected on this line. If the ASIC needs a Sleep system, then this signal needs to be handled on the pod.

1.8 Watchdog System

If the ASIC needs a Watchdog system, the pod should handle this. The WDRI line indicates that the core performs a WDR instruction. This signal can directly be used to reset a watchdog timer. A watchdog timer overflow can force an internal reset using the IRESET signal, if the watchdog is enabled.

Note: The IRESET should be held high for at least 5 core clocks (CLKIO) to ensure that the core is reset.

1.8.1 Watchdog Control Signals

WDRI: When the core performs a WDR instruction, this is reflected on this line.

-
- 1.9 Power** The ASIC ICE emulator can supply 1A (5V) to the target (custom design) through the VDD pin on the pod connector. If the target has its own power supply, this must be connected and disconnected only when the emulator is turned off. All GND pins on the pod connector must be connected to ground.
- Note:** All circuits on the custom design must be properly decoupled by decoupling capacitors.
-
- 1.10 Unsupported Signals in this Release of ASIC ICE** IOBUSY (I): When the Emulator stops, there might be operations in progress in some of the I/O devices (for instance a character which is being transmitted using a UART). The IOBUSY line is used to signal back to the Emulator that even though the Emulator is stopped, the pod is still operating, and that it cannot answer any requests before the IOBUSY goes inactive.
-
- 1.11 Example Designs**
- 1.11.1 Basic I/O Example Design** A simple test design using the Atmel ASIC ICEPRO POD is provided on a diskette together with the ASIC ICE emulator. Information of how to use the pod is described in *ATasicICE POD User's Manual*. All files are found on the *AVR ATasicICE AUXILIARY FILES* diskette.
- The file `xtestio.v` is a verilog description of a design with the following specifications:
- One 8-bit register at I/O location 0x1B (hex).
 - The register is initialized to 0.
 - The register can be read and written.
 - The contents of the register can be observed on the I/O pins marked as PortA on the pod.
- The clocks should be running all the time, and there are no interrupt services, so the signals `cpuwait`, `irq[4:0]`, `clkstopcore` and `clkstopio` are all grounded, while `clken` is high.
- There is a reset logic that stretches the reset pulse to 5 cycles and synchronizes it to the internal clock.
- To reset the register, the design makes use of the fact that the data bus from the AVR core is 0 when IRESET is high. Under normal operation, the register is loaded with data from the data bus when the `iowe` strobe is high, and the address bus has the value 0x1B.
- Each time the `IORE` strobe signal is high and the address bus has the value 0x1B, the register value is sent out to the internal data bus.
- The PAD control is simply: If `IORE` is high, then send the internal data bus value out from the FPGA. If not, send the external data bus into the FPGA. This means that there is a value on the internal data bus even when the processor is not writing to any I/O locations, but this is OK as long as the I/O does not use the data bus unless `IORE` is high. Note that in this emulator, the `IORE` strobe is not high when I/O registers inside the core are read. The designer will therefore never run into bus contention because both the internal I/O and the POD I/O are responding simultaneously, (this is an emulator feature, in an ASIC, there is no need to use pads between the AVR core and the I/O.)
- The pin placement script for a Synopsys™ / Xilinx™ FPGA environment is also provided. You can download and test this design using the provided `mcs`-file, or use the pre-programmed FLASH.

1.11.2 AT90MEGA103 I/O Example Design

The diskette includes an example of a large design: The Atmel ATmega103 I/O. The complete Verilog code is not provided because it is an intellectual property of Atmel, and not distributed. You can still download the FPGA and test it on the emulator.

Note: You will not be able to understand the design from this top-level description, but the file is included as an example on how to implement large designs on the ASIC emulator.

The basic concept for ASIC emulation is that the HDL-code from the ASIC should be reused in the FPGA as much as possible in order to emulate the ASIC functionally. Since it is 2 different types of technologies, you can never trust the timing, so we strongly recommend that the design is a synchronous design.

The file *x01838io.v* is the top-level Verilog™ description of this design. *x01838io.v* instantiates *iomodule*, *wdog* and *sleepcnt*. *iomodule* could be the same I/O verilog description as used in the standard chip. The sleep controller (*sleepcnt*) makes use of the clock gating logic in the emulator to control the sleep functions. A watch dog timer (*wdog*) stretches the *ireset* signal and resets the circuit if it times out. It might be necessary to make special versions of such modules in order to make use of the clock gating functions in the ASIC emulator and simplify asynchronous logic in the FPGA.

Note: Under `//The interrupt system. IRQACKADR is made by delaying irqack`, there is a complete example on how to implement the interrupt priority encoder to the *avrcore*.

Note that both *xramre* and *iore* must be considered for the pad control of this design, since the external RAM space is in use.

If you want to test the on-board RAM on the POD, you must strap between the signals *xrepisdel* and *xrepnodel*, and between *xwepisdel* and *xwepnodel*. This is a trick used to delay the strobe signals to the external RAM, since it is difficult to control the timing exactly in an FPGA (without designing specifically for FPGAs).

Note: Under the label `// Asynchronous timer stuff` there is an example on how the clock signals should NOT be used. The extra multiplexer between *clkio* and *ctim* makes the clock skew between the AVR core and the I/O larger and should be avoided. Try to use the clock gating logic in the emulator only.

The pin placement script for this design is also provided on the disk.

Often, there is a need to have different functions in a module when the AVR core accesses the module and when the emulator is stopped, and the user wants to access the module via the front end software. For instance, in a timer, you do not want the timer to advance when the emulator is stopped and the user accesses the I/O. The file *tim0.v* shows an example. The same verilog description is used in the ASIC and in the ASIC emulator, but a compiler switch "EM" selects between these two situations. The signal *CLKRUN* (called *runmod* in this module) determines whether the emulator is in stop mode or not, and the counter is not advanced as long as *runmod* is high.

1.12 Appendix A: Pod Connector

Direction as seen from the Emulator.

Pin(Dir)	Connector Name	Pin(Dir)	Connector Name
1 (O)	GND	33 (I/O)	DBUS6
2 (O)	GND	34 (O)	IOWE
3 (O)	ADR0	35 (I/O)	DBUS7
4 (O)	VDD	36 (O)	MRAMACK
5 (O)	ADR1	37 (O)	IOEXTEND0
6 (O)	ADR8	38 (I)	IOBUSY
7 (O)	ADR2	39	NC(*)
8 (O)	ADR9	40 (O)	IOEXTEND1
9 (O)	ADR3	41 (O)	GND
10 (O)	ADR10	42 (O)	IOEXTEND2
11 (O)	ADR4	43 (O)	CLKALWAYS
12 (O)	ADR11	44 (I)	EXTCLKIN
13 (O)	ADR5	45 (O)	EXTCLKEN
14 (O)	ADR12	46 (O)	CLKRUN
15 (O)	ADR6	47 (O)	CLKOSC
16 (O)	ADR13	48 (O)	CLKIO
17 (O)	ADR7	49 (I)	CLKSTOPIO
18 (O)	ADR14	50 (I)	CLKSTOPCORE
19 (O)	ARESET	51 (I)	CPUWAIT
20 (O)	ADR15	52 (O)	IOEXTEND3
21 (I/O)	DBUS0	53 (O)	IOEXTEND4
22 (O)	SLEEPI	54 (I)	
23 (I/O)	DBUS1	55 (I)	IRQ0
24 (O)	WDRI	56 (I)	IRQ1
25 (I/O)	DBUS2	57 (I)	IRQ2
26 (I)	IRESET	58 (I)	IRQ3
27 (I/O)	DBUS3	59 (I)	IRQ4
28 (O)	XRAMRE	60 (O)	IRQACK
29 (I/O)	DBUS4	61 (O)	GLOBINT
30 (O)	XRAMWE	62 (O)	IRQOK
31 (I/O)	DBUS5	63 (O)	GND
32 (O)	IORE	64 (O)	GND

(*) Do not connect this pin to any power or I/O.

1.13 Appendix B: Basic I/O Example Design Verilog Files

xtestio.v

```

//*****
// Module: xtestio
//
//
// Time of last save:      $Date: 1998/02/17 08:25:27 $
// Revision:                $Revision: 1.1 $
//
// Function:
//   Short example of how to connect a simple I/O module to the ASIC
//   ICEPRO.
//   A register at I/O address 0x1B can be written and read. The content
//   of this register is set on the output pins marked PORTA on the
//   ATMEL ASIC ICEPRO pod.
//
//*****

module xtestio (
    ireset, cpuwait,
    irq4,irq3,irq2,irq1,irq0,
    dbus7, dbus6, dbus5, dbus4, dbus3, dbus2, dbus1, dbus0,
    adr5, adr4, adr3,  adr2, adr1, adr0,
    areset_b,
    iore, iowe,
    clkio, clken,
    clkstopcore,clkstopio,
    fio7, fio6, fio5, fio4, fio3, fio2, fio1, fio0 );

    output ireset;// Synchronous reset (active high)
    output cpuwait;// HALT AVR core

    output irq4;// Interrupts
    output irq3;
    output irq2;
    output irq1;
    output irq0;

    inout  dbus7;// data bus
    inout  dbus6;
    inout  dbus5;
    inout  dbus4;
    inout  dbus3;
    inout  dbus2;
    inout  dbus1;
    inout  dbus0;

    input  adr5;// The I/O address bus.
    input  adr4;
    input  adr3;
    input  adr2;
    input  adr1;
    input  adr0;

    input  areset_b;// Asynchronous reset (active low)
    input  iore;// Read strobe
    input  iowe;// Write strobe
    input  clkio;// ckio from clock FPGA
    output clken;// Clock enable signal
    output clkstopcore;// Stop core clock
    output clkstopio;// Stop I/O clock

    output fio7;// Output port.
    output fio6;
    output fio5;

```



```

output fio4;
output fio3;
output fio2;
output fio1;
output fio0;

// Declarations
reg [5:0] sync_reset;
reg [7:0]port_register;
wire [7:0] dbus;
wire [5:0] ioadr;
wire port_reg_addr;

// Unused output signals to the AVR core or emulator
assign cpuwait = 1'b0;
assign {irq4,irq3,irq2,irq1,irq0} = 5'b0;
assign clken = 1'b1;
assign clkstopcore = 1'b0;
assign clkstopio = 1'b0;

// Synchronize the asynchronous reset signal. Stretch reset signal to 5
pulses.
always @(posedge clkio)
    sync_reset = {sync_reset[4:0], ~areset_b};

assign ireset = |(sync_reset[5:1]);

// Pad control
assign ioadr = {adr5, adr4, adr3, adr2, adr1, adr0};

assign {dbus7,dbus6,dbus5,dbus4,dbus3,dbus2,dbus1,dbus0} = (iore) ? dbus :
8'bz;
assign dbus = (~iore) ? {dbus7,dbus6,dbus5,dbus4,dbus3,dbus2,dbus1,dbus0}
:8'bz;
assign {fio7,fio6,fio5,fio4,fio3,fio2,fio1,fio0} = port_register;

// Main function of the module
assign port_reg_addr = (ioadr == 6'h 1b);
assign dbus = ~(port_reg_addr & iore) ? 8'bz : port_register;
always @(posedge clkio)
    if (ireset | port_reg_addr & iowe)
        port_register = dbus;

endmodule

```

set_pin_placement.scr

```

set_attribute{clkio}           "pad_location"-typestring"P118"
set_attribute{clken}          "pad_location"-typestring"P44"
set_attribute{clkstopcore}    "pad_location"-typestring"P33"
set_attribute{clkstopio}     "pad_location"-typestring"P32"
set_attribute{ireset}         "pad_location"-typestring"P20"
set_attribute{areset_b}       "pad_location"-typestring"P15"
set_attribute{cpuwait}        "pad_location"-typestring"P34"
set_attribute{irq4}           "pad_location"-typestring"P50"
set_attribute{irq3}           "pad_location"-typestring"P49"
set_attribute{irq2}           "pad_location"-typestring"P48"
set_attribute{irq1}           "pad_location"-typestring"P47"
set_attribute{irq0}           "pad_location"-typestring"P46"
set_attribute{dbus0}          "pad_location"-typestring"P4"
set_attribute{dbus1}          "pad_location"-typestring"P5"
set_attribute{dbus2}          "pad_location"-typestring"P8"
set_attribute{dbus3}          "pad_location"-typestring"P9"
set_attribute{dbus4}          "pad_location"-typestring"P10"
set_attribute{dbus5}          "pad_location"-typestring"P11"
set_attribute{dbus6}          "pad_location"-typestring"P12"
set_attribute{dbus7}          "pad_location"-typestring"P13"
set_attribute{adr5}           "pad_location"-typestring"P230"
set_attribute{adr4}           "pad_location"-typestring"P228"
set_attribute{adr3}           "pad_location"-typestring"P225"
set_attribute{adr2}           "pad_location"-typestring"P223"
set_attribute{adr1}           "pad_location"-typestring"P217"
set_attribute{adr0}           "pad_location"-typestring"P215"
set_attribute{iore}           "pad_location"-typestring"P25"
set_attribute{iowe}           "pad_location"-typestring"P26"
set_attribute{fio0}           "pad_location"-typestring"P176"
set_attribute{fio1}           "pad_location"-typestring"P175"
set_attribute{fio2}           "pad_location"-typestring"P172"
set_attribute{fio3}           "pad_location"-typestring"P171"
set_attribute{fio4}           "pad_location"-typestring"P170"
set_attribute{fio5}           "pad_location"-typestring"P169"
set_attribute{fio6}           "pad_location"-typestring"P168"
set_attribute{fio7}           "pad_location"-typestring"P167"

```